


FIRE DOOR 4 - PYROPANEL

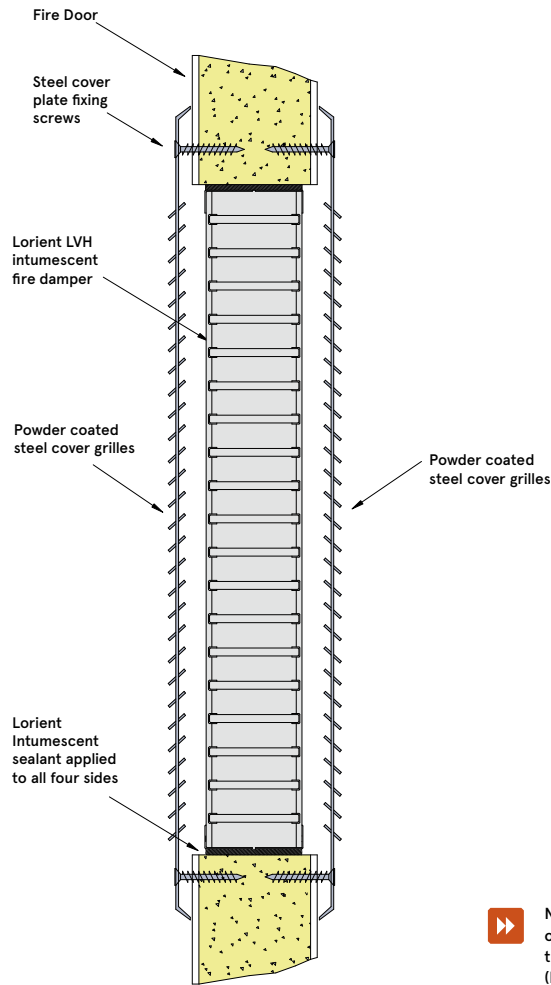

▶▶ Note: Cover grilles are designed for internal use only. If intended for exterior use they must be treated with an appropriate weather proof finish (by others).

FIRE DAMPER

LVH-Door grille installed in Pyropanel® fire door assemblies

FRL Up to -/120/30

Fire Resistance in accordance with

AS1530.4 2014

Approval Ref

EXOVA EWFA 27704400

Approved sizes

300mm x 300mm*


INSTALLATION INSTRUCTIONS

- ▶ Identify fire door type and check manufacturer's approvals to ensure that cutting an aperture in the door will not detract from the integrity of the door leaf.
- ▶ Establish the number of allowable openings, their maximum size and if there are any positioning limitations.
- ▶ Carefully cut the aperture to the required size allowing an additional 5mm clearance to all sides (for application of intumescent sealant).
- ▶ Ensure aperture is square and true and position the damper into the cut-out so perimeter gaps between the aperture and damper are even.
- ▶ Apply Lorient intumescent sealant to both sides, making sure the perimeter gap is completely filled.
- ▶ Position pressed steel cover grilles centrally over the damper and fix to the door leaf using supplied screws.
- ▶ * Grilles to be installed at a minimum of 500mm from the bottom - refer to our technical department for installation requirements

Powered by:



FIRE DOOR 5 - PYROPANEL

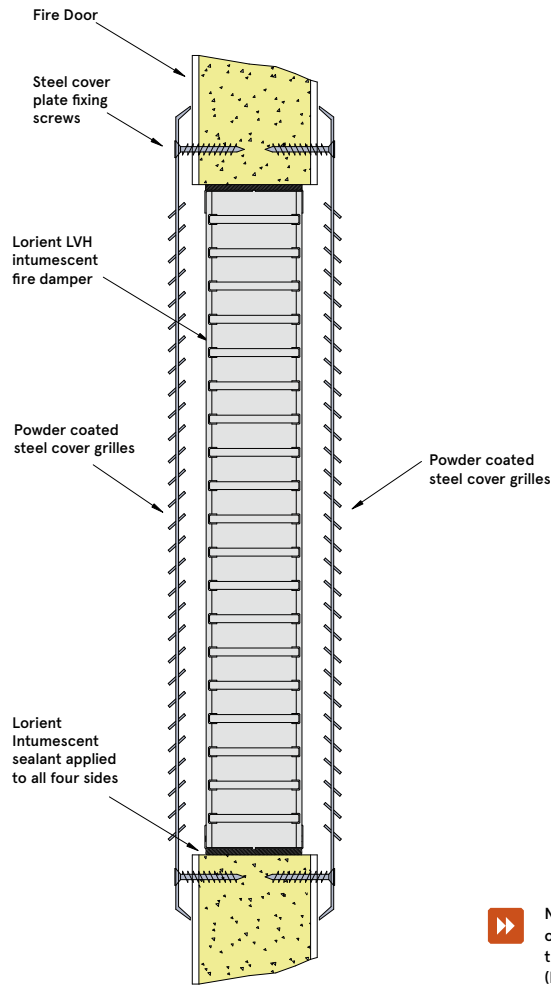

▶▶ Note: Cover grilles are designed for internal use only. If intended for exterior use they must be treated with an appropriate weather proof finish (by others).

FIRE DAMPER

LVH-Door grille installed in Pyropanel® fire door assemblies

FRL Up to -/120/30

Fire Resistance in accordance with

AS1530.4 2014

Approval Ref

EXOVA EWFA 27704400

Approved sizes

600mm x 300mm*


INSTALLATION INSTRUCTIONS

- ▶ Identify fire door type and check manufacturer's approvals to ensure that cutting an aperture in the door will not detract from the integrity of the door leaf.
- ▶ Establish the number of allowable openings, their maximum size and if there are any positioning limitations.
- ▶ Carefully cut the aperture to the required size allowing an additional 5mm clearance to all sides (for application of intumescent sealant).
- ▶ Ensure aperture is square and true and position the damper into the cut-out so perimeter gaps between the aperture and damper are even.
- ▶ Apply Lorient intumescent sealant to both sides, making sure the perimeter gap is completely filled.
- ▶ Position pressed steel cover grilles centrally over the damper and fix to the door leaf using supplied screws.
- ▶ * Grilles to be installed at a minimum of 500mm from the bottom - refer to our technical department for installation requirements

Powered by:



FIRE DOOR 6 - PYROPANEL

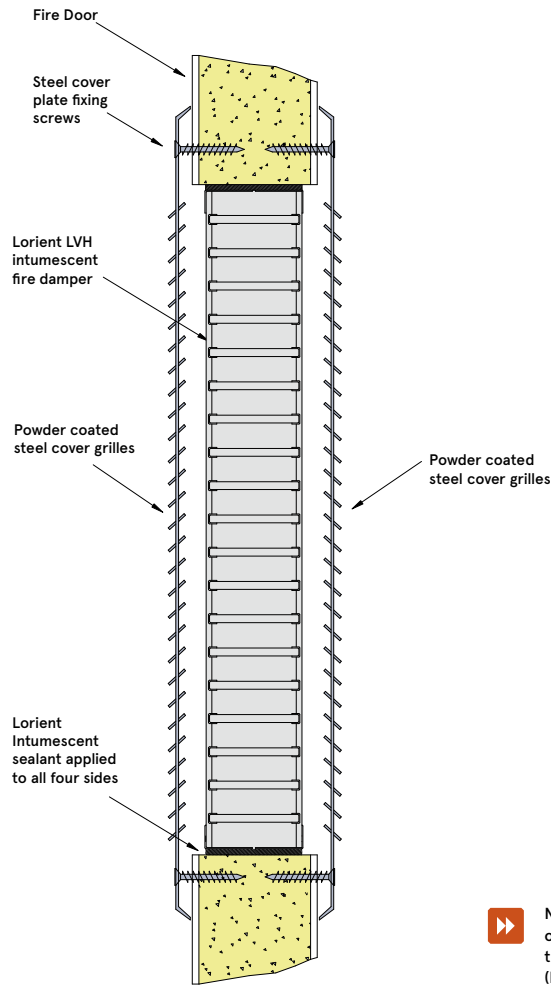

▶▶ Note: Cover grilles are designed for internal use only. If intended for exterior use they must be treated with an appropriate weather proof finish (by others).

FIRE DAMPER

LVH-Door grille installed in Pyropanel® fire door assemblies

FRL Up to -/120/30

Fire Resistance in accordance with

AS1530.4 2014

Approval Ref

EXOVA EWFA 27704400

Approved sizes

450mm x 450mm*


INSTALLATION INSTRUCTIONS

- ▶ Identify fire door type and check manufacturer's approvals to ensure that cutting an aperture in the door will not detract from the integrity of the door leaf.
- ▶ Establish the number of allowable openings, their maximum size and if there are any positioning limitations.
- ▶ Carefully cut the aperture to the required size allowing an additional 5mm clearance to all sides (for application of intumescent sealant).
- ▶ Ensure aperture is square and true and position the damper into the cut-out so perimeter gaps between the aperture and damper are even.
- ▶ Apply Lorient intumescent sealant to both sides, making sure the perimeter gap is completely filled.
- ▶ Position pressed steel cover grilles centrally over the damper and fix to the door leaf using supplied screws.
- ▶* Grilles to be installed at a minimum of 500mm from the bottom -refer to our technical department for installation requirements

Powered by:



FIRE DOOR 7 - PYROPANEL

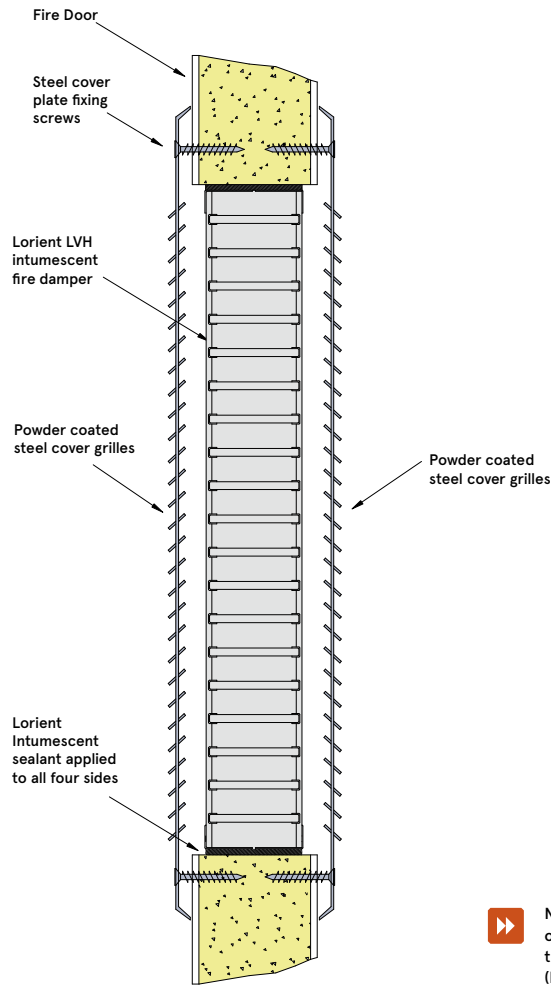

▶▶ Note: Cover grilles are designed for internal use only. If intended for exterior use they must be treated with an appropriate weather proof finish (by others).

FIRE DAMPER

LVH-Door grille installed in Pyropanel® fire door assemblies

FRL Up to -/120/30

Fire Resistance in accordance with

AS1530.4 2014

Approval Ref

EXOVA EWFA 27704400

Approved sizes

600mm x 600mm

INSTALLATION INSTRUCTIONS

- ▶ Identify fire door type and check manufacturer's approvals to ensure that cutting an aperture in the door will not detract from the integrity of the door leaf.
- ▶ Establish the number of allowable openings, their maximum size and if there are any positioning limitations.
- ▶ Carefully cut the aperture to the required size allowing an additional 5mm clearance to all sides (for application of intumescent sealant).
- ▶ Ensure aperture is square and true and position the damper into the cut-out so perimeter gaps between the aperture and damper are even.
- ▶ Apply Lorient intumescent sealant to both sides, making sure the perimeter gap is completely filled.
- ▶ Position pressed steel cover grilles centrally over the damper and fix to the door leaf using supplied screws.

Powered by:

